


JET FILTER

Installation and Maintenance Instructions

2.5" ABS JETFilters

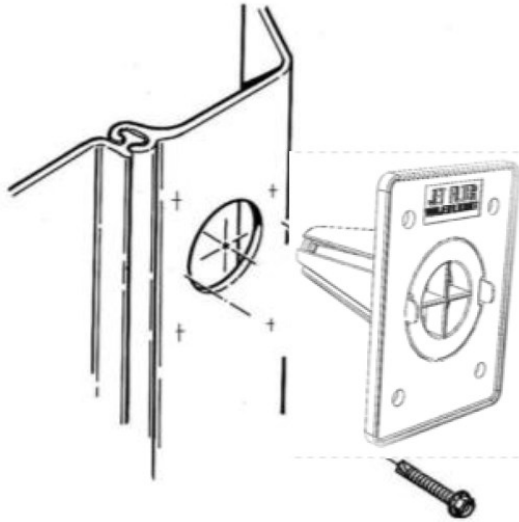

Installation

Step 1.

Core a 2 ½ inch diameter hole in the sheet piling/seawall about 4 inches deep every 4 to 6 feet slightly above the mean high water line.

Step 2.

Insert the JET Filter assembly into the drilled hole on wall.

Step 3.

Pre-drill the 4 mounting holes by using a 5/16" bit. Attach with 4 stainless steel, self-drilling screws (Included) through the filter plate holes into the sheet piling/seawall or before welding grind to remove surface coating for a good weld or anchor mount.

Maintenance

Step 1.

To remove or replace the filter sleeve cartridges simply pinch the clips inward on each side by gently pulling out.

Step 2.

Once filter is removed clean or replace in reverse order.

Note: The JETFilter Assembly housing should not be removed once installed, unless you plan to replace the entire unit.

