


JET FILTER

Installation and Maintenance Instructions

3", 4" and 6" Stainless Steel JETFilters

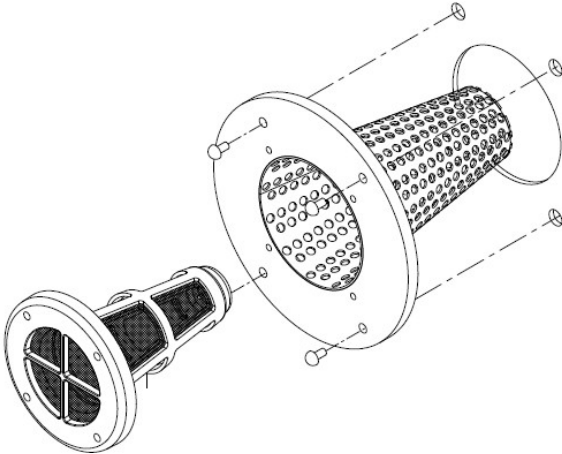

Installation

Step 1.

Core a 3", 4 or 6 inch diameter hole depending on the size of filter you wish to install, in the sheet piling/seawall or concrete abutment every 4 to 6 feet slightly above the mean high water line or lowest elevation.

Step 2.

Insert the JET Filter assembly into the drilled hole on wall.

Step 3.

Pre-drill the 4 mounting holes by using a 5/16" bit. Attach with 4 tap-Flex screws (Included) through the filter plate holes into the sheet piling/seawall, abutment or before welding grind to remove surface coating for a good weld or anchor mount.

Maintenance


Step 1.

To remove or replace the filter sleeve cartridges simply unbolt the 4 1/4" screws from the filter sleeve and gently pull out.



Step 2.

Once filter is removed clean or replace in reverse order.

Note: The JETFilter Assembly housing should not be removed once installed.

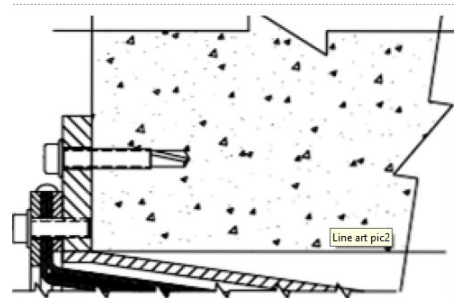

Recommended Bulkhead & Filter Assembly Mounting

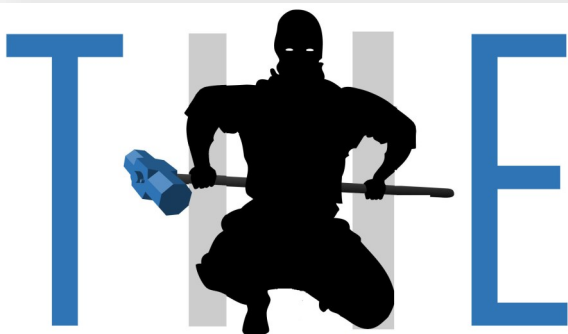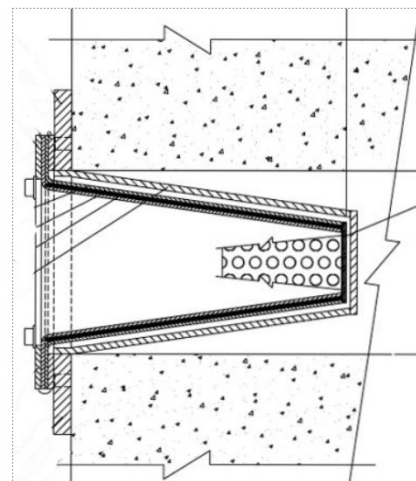

Plastic Piling Company
www.plasticpiling.ninja
Tel 01543 677290